

CITIZEN®

取扱説明書

Thank you for your purchase of this Citizen watch.

Before using the watch, read this instruction manual carefully to ensure correct use.

After reading the manual, store it in a safe place for future reference.

Be sure to visit the Citizen website at <http://www.citizenwatch-global.com/>.

 
Here you will find a variety of information such as electronic setting guides, answers to frequently asked questions, Eco-Drive recharging information and more.

### To check the movement number

A case number—4 alphanumeric characters and 6 or more alphanumeric characters—is engraved on the case back. (Figure on the right)

The first 4 characters of the case number represent the movement number of the watch. In the example on the right, “△△△△” is the movement number.

### Engraving position example






The engraving position may differ depending on watch model.

## Safety precautions — IMPORTANT



---

This manual contains instructions that should be strictly followed at all times not only for optimal use, but to prevent any injuries to yourself, other persons or property. We encourage you to read the entire booklet (especially, pages **14** to **27**) and understand the meaning of the following symbols:

- Safety advisories are categorized and depicted in this manual as follows:

 <b>DANGER</b>	Highly likely to cause death or serious injury.
 <b>WARNING</b>	Can cause serious injury or death.
 <b>CAUTION</b>	Can or will cause minor or moderate injury or damage.

- Important instructions are categorized and depicted in this manual as follows:  
(Following symbols are examples of Pictograms.)

	Warning (caution) symbol followed by prohibited matters.
	Warning (caution) symbol followed by instructions that should be followed or precautions that should be observed.

## Features

### ■ Thin movement

Eco-Drive watch with the movement of 1.0 mm thickness (designed value).

### ■ Eco-Drive

 
No need for periodical changing of rechargeable cells. The watch is charged by light.

\* "Eco-Drive" is an original technology of Citizen.

## CONTENTS

<b>Before using this watch</b> . . . . .	<b>6</b>
<b>Component identification</b> . . . . .	<b>9</b>
<b>Charging your watch</b> . . . . .	<b>10</b>
<b>Adjusting the time</b> . . . . .	<b>13</b>
<b>Eco-Drive watch handling precautions</b> . . . . .	<b>14</b>
<b>Water resistance</b> . . . . .	<b>18</b>
<b>Precautionary items and usage limitations</b> . . . . .	<b>21</b>
<b>Warranty and Service</b> . . . . .	<b>28</b>
<b>Specifications</b> . . . . .	<b>30</b>
<b>Contact us</b> . . . . .	<b>32</b>

## Before using this watch



This watch has a rechargeable cell which is charged by exposing the dial to light.  
Expose the dial to direct sunlight regularly to charge the watch.

## **Band adjustment**

We recommend seeking the assistance of an experienced watch technician for sizing of your watch. If adjustment is not done correctly, the bracelet may unexpectedly become detached leading to loss of your watch or injury. Consult an authorized service center.

## **Protective stickers**

Be sure to remove any protective stickers that may be on your watch (case back, band, clasp, etc.). Otherwise, perspiration or moisture may enter the gaps between the protective stickers and the parts, which may result in a skin rash and/or corrosion of the metal parts.





## **How to use a specially designed crown**

 
Some models are equipped with a specially designed crown to prevent accidental operation.

### ***Screw down crown***

Unlock the crown prior to operate your watch.

	<b>Unlock</b>	<b>Lock</b>
<b>Screw down crown</b>	 <p>Rotate the crown counterclockwise until it releases from the case.</p>	 <p>Push the crown in to the case. With gentle pressure towards the case, rotate the crown clockwise to secure it to the case. Be sure to tighten firmly.</p>

## Component identification

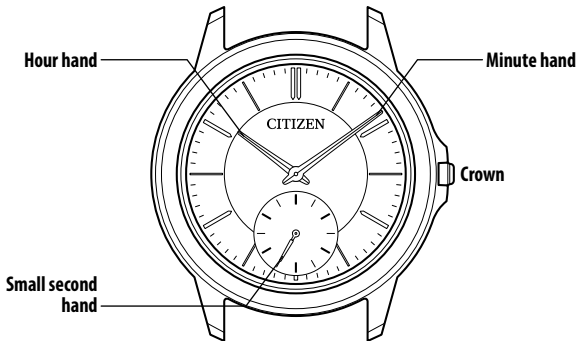


- The illustrations in this instruction manual may differ from the actual appearance of your watch.
- A solar cell is located under the dial.

## Charging your watch

 This watch has a rechargeable cell which is charged by exposing the dial to light, such as direct sunlight or fluorescent lamps.

For optimal performance, be sure to:

- **Put the watch in a location where the dial is exposed to bright light such as by the window even when it is not used.**
- **Charge the watch by exposing it to direct sunlight for five to six hours at least once a month.**
- **Avoid leaving it in dark places for long periods of time.**

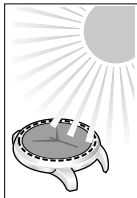

**CAUTION**

- If the surrounding temperature falls below 0°C (32°F) or exceeds 40°C (104°F), the “**Charge suspension temperature detection function**” will activate and charging will not be possible.
  - Do not charge the watch at a high temperature (about 60°C (140°F) or higher) as doing so may cause movement malfunction.
  - If the watch is obscured from light by long sleeves frequently, supplemental charging may be needed to ensure continual operation.
- The watch stops charging automatically after finishing (overcharging prevention function). The function prevents damage to performance of the watch and rechargeable cell due to overcharging.

### Charging time by environment

Below are the approximate charging times when exposing to light continuously. Please use this table as a general reference only.

Environment	Illuminance (lx)	Charging time (approx.)		
		To work for one day	To start working normally when the cell is discharged	To become fully charged when the cell is discharged
Outdoors (sunny)	100 000	2 minutes	25 minutes	6 hours
Outdoors (cloudy)	10 000	12 minutes	4 hours	60 hours
20 cm (8 inches) away from a fluorescent lamp (30W)	3 000	40 minutes	13 hours	200 hours
Interior lighting	500	4 hours	150 hours	–

- **Exposing to direct sunlight is recommended to charge your watch.**

A fluorescent lamp or interior lighting does not have sufficient illumination to charge the rechargeable cell efficiently.

### ***Duration without additional charging after charging the watch fully***

About 7 months in normal use.

## Adjusting the time



- 1** Pull the crown out to position **1** just as the second hand is at the 0 second position.
- 2** Rotate the crown to adjust the time.
- 3** Push the crown in to position **0** in accordance with a reliable time source.

## Eco-Drive watch handling precautions

### <Always Make Sure to Recharge Frequently>

 
- For optimal performance, your watch should remain fully charged.
- Long sleeves may inhibit light transmission to your watch. This may result in your watch losing charge. In these cases supplemental charging may be necessary.
- When you take off the watch, place it in a bright location to ensure optimal performance.

**⚠ CAUTION Recharging Precautions**

- Do not charge the watch at a high temperature (about 60 °C (140 °F) or higher) as doing so may cause the movement to malfunction.

**Examples:**

- Charging the watch too close to a light source which generates a large amount of heat such as an incandescent lamp or halogen lamp.
  - \* When charging under an incandescent lamp, be sure to leave 50 cm (20 inches) or more between the lamp and the watch to avoid exposing the watch to excessive heat.
- Charging the watch in a location where the temperature may become extremely high such as on the dashboard of a vehicle.

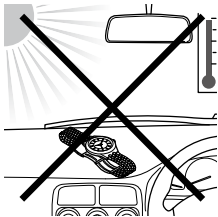



### <Replacement of Rechargeable Cell>

- This watch utilizes a special rechargeable cell that does not require periodical replacement. However power consumption may increase after using the watch for a number of years due to wear of internal components and deterioration of oils. This may cause stored power to be depleted at a faster rate. For optimal performance, we recommend having your watch inspected every 2-3 years for proper operation and condition check.

### **WARNING Handling of Rechargeable Cell**

- The rechargeable cell should never be removed from the watch.  
If for any reason it becomes necessary to remove the rechargeable cell from the watch, keep out of the reach of children to prevent accidental swallowing.  
If the rechargeable cell is accidentally swallowed, consult a doctor immediately.
- Do not dispose of the rechargeable cell with ordinary garbage. Please follow the instructions of your municipality regarding collection of batteries to prevent the risk of fire or environmental contamination.

 **WARNING Use Only the Specified Battery**







- Never use a battery other than the rechargeable cell specified for use in this watch. Although the watch structure is designed so that it will not operate when another type of battery is installed, if a conventional watch battery or other type of battery is installed in the watch and the watch is recharged, there is the risk of overcharging which may cause the battery to rupture.  
This can cause damage to the watch and injury to the wearer.  
When replacing the rechargeable cell, always make sure to use the designated rechargeable cell.

## Water resistance

### **WARNING** Water Resistance

- Refer to the watch dial and/or the case back for the indication of the water resistance of your watch. The following chart provides examples of use for reference to ensure that your watch is used properly. (The unit “1bar” is roughly equal to 1 atmosphere.)
- WATER RESIST(ANT) ××bar may also be indicated as W.R.××bar.

Name	Indication	Specification
	Dial or Case back	
Non water-resistant	—	Non water-resistant
Everyday use water-resistant watch	WATER RESIST	Water-resistant to 3 atmospheres
Upgraded everyday use water-resistant watch	W. R. 5 bar	Water-resistant to 5 atmospheres
	W. R. 10/20 bar	Water-resistant to 10 or 20 atmospheres

Water-related use					
					
Minor exposure to water (washing face, rain, etc.)	Swimming and general washing work	Skin diving, marine sports	Scuba diving using an air tank	Saturation diving using helium gas	Operate the crown or button when the watch is wet
<b>NO</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>
<b>OK</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>
<b>OK</b>	<b>OK</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>
<b>OK</b>	<b>OK</b>	<b>OK</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>

## ***Water resistance***

---

- Non-water resistant models are not designed to come into contact with any moisture. Take care not to expose a watch with this rating to any type of moisture.
- Water resistance for daily use (to 3 atmospheres) means the watch is water resistant for occasional accidental splashing.
- Upgraded water-resistance for daily use (to 5 atmospheres) means that the watch may be worn while swimming, but is not to worn while skin diving.
- Upgraded water-resistance for daily use (to 10/20 atmospheres) means that the watch may be worn while skin diving, but not while scuba or saturated diving using helium gas.

## Precautionary items and usage limitations

### **CAUTION To Avoid Injury**

- Be particularly careful when wearing your watch while holding a small child, to avoid injury.
- Be particularly careful when engaged in strenuous exercise or work, to avoid injury to yourself and others.
- Do not wear your watch while in a sauna or other location where your watch may become excessively hot, since there is the risk of burns.
- Be careful when putting on and taking off your watch, since there is a risk of damaging your fingernails, depending on the manner in which the band is fastened.
- Take off your watch before going to bed.

### **CAUTION** Precautions

- Always use the watch with the crown pushed in (normal position). If the crown is of the screw lock-type, make sure it is securely locked.
- Do not operate the crown or any push buttons when the watch is wet. Water may enter the watch causing damage to vital components.
- If water enters the watch or the watch fogs up and does not clear up even after a long time, consult your dealer or an authorized service center for inspection and/or repair.
- Even if your watch has a high level of water resistance, please be careful of the following.
  - If your watch is immersed in sea water, rinse thoroughly with fresh water and wipe with a dry cloth.
  - Do not pour water from a tap directly onto your watch.
  - Take off your watch before taking a bath.
- If seawater enters the watch, place the watch in a box or plastic bag and immediately take it in for repair. Otherwise, pressure inside the watch will increase, and parts (crystal, crown, push button, etc.) may come off.

 **CAUTION** When Wearing Your Watch

**<Band>**

- Leather bands and rubber (urethane) bands will deteriorate over time due to perspiration dirt. Because of the natural materials, leather band will be worn, deformed, and discolored over time. It is recommended to replace the band periodically.
- The durability of a leather band may be affected when wet (fading, peeling of adhesive), owing to the properties of the material. Moreover, wet leather may cause a rash.
- Do not stain a leather band with substances containing volatile materials, bleach, alcohol (including cosmetics). Discoloration and premature aging may be occurred. Ultraviolet light such as direct sunlight may cause discoloration or deformation.
- It is recommended to take off the watch if it gets wet, even if the watch itself is water-resistant.
- Do not wear the band too tightly. Try to leave enough space between the band and your skin to allow adequate ventilation.
- The rubber (urethane) band may be stained by dyes or soil present in or on clothing or other accessories. Since these stains may not be removable, caution is required when wearing your watch with items that tend to easily transfer color (articles of clothing, purses, etc.). In addition, the band may be deteriorated by solvents or moisture in the air. Replace with a new one when it has lost elasticity or become cracked.



**⚠ CAUTION When Wearing Your Watch (continued)**

- Please request adjustment or repair of the band in the following cases:
  - You notice an abnormality with the band due to corrosion.
  - The pin of the band is protruding.
- We recommend seeking the assistance of an experienced watch technician for sizing of your watch. If adjustment is not done correctly, the bracelet may unexpectedly become detached leading to loss of your watch or injury.  
Consult an authorized service center.

**<Temperature>**

- The watch may stop or the function of the watch may be impaired in extremely high or low temperature. Do not use the watch in places where the temperature is outside the operating temperature range as stated in the specifications.

**<Magnetism>**

- Analog quartz watches are powered by a step motor that uses a magnet. Subjecting the watch to strong magnetism from the outside can cause the motor to operate improperly and prevent the watch from keeping time accurately.  
Do not allow the watch to come into close proximity to magnetic health devices (magnetic necklaces, magnetic elastic bands, etc.) or the magnets used in the latches of refrigerator doors, clasps used in handbags, the speaker of a cell phone, electromagnetic cooking devices and so on.

**<Strong Shock>**

- Avoid dropping the watch or subjecting it to other strong impact. It may cause malfunctions and/or performance deterioration as well as damage to the case and bracelet.

**<Static Electricity>**

- The integrated circuits (IC) used in quartz watches are sensitive to static electricity. Please note the watch may operate erratically or not at all if exposed to intense static electricity.

**<Chemicals, Corrosive Gasses and Mercury>**

- If paint thinner, benzene or other solvents or products containing these solvents (including gasoline, nail-polish remover, cresol, bathroom cleaners and adhesives, water repellent, etc.) are allowed to come into contact with the watch, they may discolor, dissolve or crack the materials. Be careful when handling these chemicals. Contact with mercury such as that used in thermometers may also cause discoloration of the band and case.

**<Protective Stickers>**

- Be sure to remove any protective stickers that may be on your watch (case back, band, clasp, etc.). Otherwise, perspiration or moisture may enter the gaps between the protective stickers and the parts, which may result in a skin rash and/or corrosion of the metal parts.

 **CAUTION** Always Keep Your Watch Clean

- Rotate the crown while it is pressed in fully and press the buttons periodically so they do not become stuck due to accumulations of foreign matter.
- The case and band of the watch come into direct contact with the skin. Corrosion of the metal or accumulated foreign matter may result in black residue coming from the bracelet when exposed to moisture or perspiration. Be sure to keep your watch clean at all times.
- Be sure to periodically clean the bracelet and case of your watch to remove accumulated dirt and foreign matter. In rare circumstances, accumulated dirt, foreign matter may cause irritation with the skin. If you notice this, discontinue wearing the watch and consult your physician.
- Be sure to periodically clean foreign matter and accumulated materials from the metal band, synthetic rubber strap (polyurethane) and/or metal case using a soft brush and mild soap. Be careful not to allow moisture on the case if your watch is not water resistant.
- Leather bands may become discolored by perspiration or dirt. Always keep your leather band clean by wiping with a dry cloth.

## **Caring for Your Watch**

- Wipe any dirt or moisture such as perspiration from the case and crystal with a soft cloth.
- For metallic, plastic or synthetic rubber (polyurethane) band, clean it with soap and a soft toothbrush. Be sure to thoroughly rinse the band after cleaning to remove any soap residue.
- For a leather band, wipe off dirt using a dry cloth.
- If you will not be using your watch for an extended period of time, carefully wipe off any perspiration, dirt or moisture and store in a proper location, avoiding locations subject to excessively high or low temperatures and high humidity.

### **<When Luminous Paint is used for your watch>**

The paint on the dial and hands helps you with reading the time in a dark place. The luminous paint stores light (daylight or artificial light) and glows in a dark place. It is free from any radioactive substance or any other material harmful to a human body or environment.

- The light emission will appear bright at first and then diminish as time passes.
- The duration of the light (“glow”) will vary depending on the brightness, types of and distance from a light source, exposure time, and the amount of the paint.
- The paint may not glow and/or may dissipate quickly if exposure to light was not sufficient.

## Warranty and Service

### <Free Guarantee>

In the case a malfunction has occurred during the course of normal use while the watch is still under warranty, the watch will be repaired free of charge in accordance with the conditions of the warranty included with this manual.

### <Stock Period of Repair Parts>

Our standard period for stocking repair parts for each model is generally seven years. When an exterior part such as the watch case, glass, dial, hand, crown or band is damaged, a spare part with different appearance may sometimes be used.

### <Repair Period>

Repairs can be performed on your watch within the repair parts stock period even after the free guarantee has expired. However, you will be charged for these repairs. Please take the watch to the shop where you purchased it and ask whether it can be repaired because the repair period varies according to the conditions of use, environment and so forth. Moreover, there are cases in which it is difficult to restore the watch to its original accuracy when decreased accuracy has resulted from long-term use.

### <Change of Address or Receiving as a Gift>

In the event that you have moved or have received your watch as a gift, and are not able to bring your watch to the shop where it was purchased for servicing, please consult an authorized service center.

### <Periodic Inspection (Charge Basis)>

- Water resistance

As the water resistance will be reduced over time, you should have your watch inspected and its water resistance verified every 2-3 years (charge basis) to extend its life and ensure safety. To maintain its water resistance, it is recommended to request us to replace the packings and other parts of your watch.

- Disassembling for internal cleaning (repair)

You should have your watch disassembled and its internal components cleaned periodically to extend its life. Lubrication oils are used to reduce wearing of moving parts such as gears. However, over time the lubrication oils will degrade and wear will increase, eventually resulting in malfunction. Please have your watch undergo internal cleaning once every 5 years as a guide (although the maintenance frequency depends on the usage circumstances).

### <Request to Customers>

All parts of this watch, except for the band, are to be repaired only at CITIZEN.

This is because special technologies and equipment are required to perform repairs, inspections and adjustments. Please make requests for repairs to an authorized service center when having your watch repaired.

### <Other Inquiries>

If you have any questions regarding the way warranty, repairs or other matters, please inquire at the shop where you purchased your watch or an authorized service center.

## Specifications

<b>Model</b>	8845	<b>Type</b>	Analog Solar-powered watch
<b>Timekeeping accuracy</b>	Average monthly accuracy: $\pm 15$ seconds when worn at normal operating temperatures between $+5^{\circ}\text{C}$ ( $41^{\circ}\text{F}$ ) and $+35^{\circ}\text{C}$ ( $95^{\circ}\text{F}$ )		
<b>Operating temperature range</b>	$-10^{\circ}\text{C}$ ( $14^{\circ}\text{F}$ ) to $+60^{\circ}\text{C}$ ( $140^{\circ}\text{F}$ ) • If the surrounding temperature falls below $0^{\circ}\text{C}$ ( $32^{\circ}\text{F}$ ) or exceeds $40^{\circ}\text{C}$ ( $104^{\circ}\text{F}$ ), the “Charge suspension temperature detection function” will activate and charging will not be possible.		
<b>Display functions</b>	Time: Hours, minutes, seconds		
<b>Maximum run time from full charge</b>	When fully charged, the watch runs without additional charging in normal use: Approximately 7 months Power reserve upon insufficient charge warning function: Approximately 4 days		
<b>Battery</b>	Rechargeable cell (lithium button cell), 1pc.		

<b>Additional functions</b>	<ul style="list-style-type: none"><li>• Solar power function</li><li>• Overcharging prevention function</li><li>• Charge suspension temperature detection function</li><li>• Quick start function</li><li>• Insufficient charge warning (2-second interval movement)</li></ul>
-----------------------------	--

Specifications and contents of this booklet are subject to change without prior notice.



<http://citizen.jp/>