


- This watch is solar-powered. Expose the dial to light and use it sufficiently charged.
- To see details of charging time, specifications and operations, refer to the instruction manual:  8730 instruction manual

## Component identification

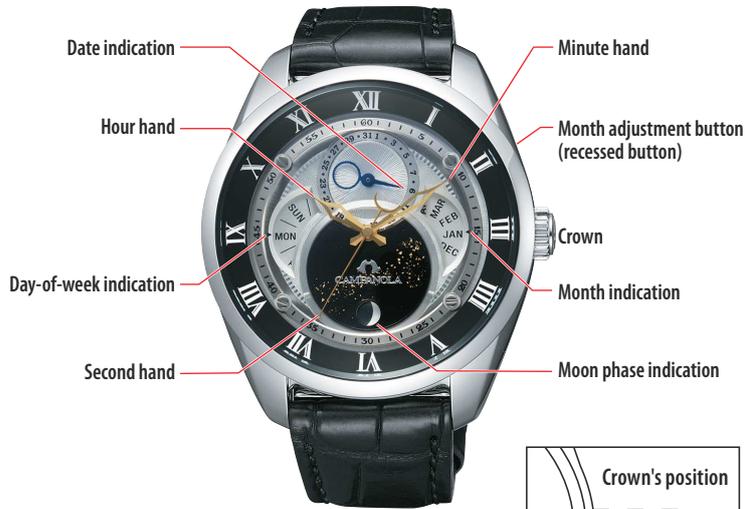

- Use a narrow-tipped object to press the recessed button.
- Actual appearance may differ from the illustration.
- The crown has two positions when pulling it out.

 
## Setting the day-of-week indication

It is convenient to execute settings on this watch in the following order: day-of-week indication, moon phase indication, date indication, month indication and time.

- 1. Pull the crown out to position 2.**  
The second hand stops.
- 2. Rotate the crown clockwise to set the day-of-week indication.**
  - The day-of-week indication starts to change at about 0:00 AM and finishes at about 5:00 AM.
- 3. Push the crown in to position 0 to finish the procedure.**

## Setting the moon phase indication

- 1. Pull the crown out to position 1.**
- 2. Rotate the crown clockwise to set the moon phase.**
  - Refer to a newspaper or other source to see actual moon phase.

Phase of the moon	New moon	First quarter moon	Full moon	Last quarter moon
Age of the moon	0	About 7	About 15	About 22
Tide	Spring tide	Neap tide	Spring tide	Neap tide
Indication				
				

- Use the indicated moon phase only as a reference.
- Appearance of the indication may differ in some models.
- The moon phase can be set more accurately when it is new or full moon.

## 3. Push the crown in to position 0 to finish the procedure.

## Setting the date indication

- Do not adjust the date indication while the watch shows 9:00 PM - 0:00 AM. Otherwise, the date indication may change incorrectly thereafter.
- Date indication adjustment is required on the first days of March, May, July, October and December.

- 1. Pull the crown out to position 1.**
- 2. Rotate the crown counterclockwise to set the date indication.**
- 3. Push the crown in to position 0 to finish the procedure.**

## Setting the month indication

- Do not adjust the month indication while the date indication shows 31 - 2. Change the date indication to any other day than 31 - 2 before adjusting the month indication. Adjust the date indication again after finishing month indication adjustment.

- 1. Press and release the month adjustment button to adjust the month indication.**

## Setting the time

- 1. Pull the crown out to position 2 when the second hand points 0 second.**  
The second hand stops.
- 2. Rotate the crown clockwise to set the time.**
  - Change of date indication shows it just became AM. Take care the time set is AM or PM.
  - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
  - When the date indication is changed in the course of setting the time, adjust it following "Setting the date indication".
- 3. Push the crown in to position 0 in accordance with a reliable time source to finish the procedure.**