

BULOVA

MARINE STAR SERIES C CHRONOGRAPH COLLECTION

SETTING THE TIME AND DATE

This 3-subdial chronograph with built-in stopwatch can measure and display time up to 59 minutes/59 seconds and provide timing to 1/20th of a second. To conserve battery life, the 1/20th of a second hand moves continuously for 30 seconds after starting, then stops at zero position.

- To set time, unscrew and pull the crown out to the 2nd position, **C**.
- Turn the crown clockwise to set hour and minute hands.
- To set date, pull the crown out to the 1st position, **B**.
- Turn the crown clockwise to set date.
* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day
- After the time and date has been set, push and screw the crown back in to normal position, **A**.

READING THE MARINE STAR CHRONOGRAPH

- 1 Minute Hand
- 2 Chronograph Start / Stop Pusher
- 3 Chronograph 1/20 Second Hand
- 4 Normal Crown Position
- 5 Chronograph Reset Pusher
- 6 Date
- 7 Sub Second Hand
- 8 Chronograph Minute Hand
- 9 Hour Hand
- 10 Chronograph Second Hand



BULOVA

MARINE STAR SERIES C CHRONOGRAPH COLLECTION

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/20 second united up to maximum of 59 minutes 59 seconds. The chronograph 1/20 second hand keeps continuously for 30 seconds after starting, and then stops at zero position.

Measuring time with the stopwatch

1. Press button “2” to start the chronograph.
2. The chronograph can be started and stopped each time button “2” is pressed.
3. Press button “5” to reset the chronograph and chronograph minute and second hands return to their zero positions.

CHRONOGRAPH RESET (INCLUDE AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the zero position.

1. Pull the crown out to the 2nd position, **C**.
2. Press the button “2” to set the chronograph second hand to the zero position.
3. Press the button “5” once to set the chronograph 1/20 second hand to the zero position.
* The chronograph hands can be advanced rapidly by continuously pressing button “2” or “5”.
4. Once the hands are set at zero position, reset the time and return the crown to its normal position, **A**.



96B272