

THE SIGNATURE COLLECTION

Moon Phase Flyback Chronograph

Mvmt. Cal. E270



IMPORTANT NOTE: After a complete loss of power, a sharp knock, static electricity or magnetism, you may find your watch is not operating correctly. If this occurs, you will need to fully recharge your watch and perform the ALL RESET procedure as outlined below.

NOTE: Your watch may feature a screw down crown. If so, unscrew the crown by rotating it counterclockwise to release it from the case before performing the all reset procedure, setting the time or calendar. Be sure to screw the crown into the case by gently pushing and turning clockwise after completing any of these procedures.

ALL RESET PROCEDURE AND O-POSITIONING PROCEDURE

□ Pull the crown out two 'clicks' to the time setting position.

□ Simultaneously press and hold the upper left and lower right buttons (C & A) for two seconds then release. NOTE: the upper left button (C) is recessed into the case and will require a narrow object such as a wooden toothpick or the tip of a pair of pointed tweezers.

□ The moon phase indicator will move all the way to the right then all the way back to the left indicating the "All Reset" procedure is successful.

The correct 0-position for the moon phase indicator is shown in the graphic below:



If the moon phase indicator is not in this position after performing the all reset:

□ Press and release the upper left recessed button (C) to move it to the correct 0-position.

□ Push the crown in two 'clicks' to the closed position next to the case.

□ You must now set the time, calendar and moon phase indicator.

TO SET THE TIME

□ When the 'real time' second hand (6:00 sub dial) reaches the 12:00 position, pull the crown out two 'clicks'.

□ Rotate the crown to set the current time. Be sure to pay attention to the 24-hour hand (6:00 sub dial) to ensure the proper AM or PM time is set.

□ Push the crown in two 'clicks' to the closed position. You must now continue with setting the calendar.

TO SET THE CALENDAR

NOTE: The calendar is based on a 31-day month and therefore must be corrected for each month having less than 31 days. Be sure the time shown is **not** between 11:00 p.m. and 2:00 a.m. before proceeding.

□ Pull the crown out one 'click'.

□ Rotate the crown counterclockwise until the correct date is shown.

□ Push the crown in one 'click' to the closed position next to the case.

TO SET THE MOON PHASE INDICATOR

The moon phase indicator provides an approximate representation of the phases of the moon. The moon phase indicator is not intended to show an exact representation of the moon as it appears in the sky.

The moon cycles in 29.53 days from new moon, to full moon and back to new moon. The moon phase indicator will advance slightly every 7.38 hours.

You will need to refer to your local newspaper, internet or other source to determine the moon phase on the day of setting. For as close a representation as possible, we recommend setting the moon phase indicator when the moon phase is at 0, 5, 10, full, 20, or 25 days.

For the following example, we will assume the moon phase is at a "full moon".

□ Be sure the chronograph is not in operation and has been reset to '0'.

□ Be sure the crown is in the closed position next to the case.

□ Press and release the upper left recessed button (C) with a small narrow object such as a pointed wooden toothpick, until the moon phase indicator is as close to center as possible with the "full moon" position as shown below. (to rapidly advance the indicator, press and hold the button.)

NOTE: The moon phase indicator may not center exactly with the "full moon" position on the dial. This is because a full moon is at 14 days, which is slightly off center of the full moon indication.



TO USE THE 12-HOUR CHRONOGRAPH

NOTE: When chronograph timing has reached 12-hours, the chronograph will stop. If this happens you will need to press and release the lower right button (A) to reset the chronograph before commencing new timing.

□ Firmly press and release the upper right button (B) to start the chronograph. The chronograph second hand will start to move in 1/5 second increments.

□ Firmly press and release the upper right button (B) to stop the chronograph.

□ Firmly press and release the lower right button (A) to reset the chronograph.