

BULOVA

ARCHIVE SERIES CHRONOGRAPH A “SURFBOARD” COLLECTION

A style inspired by history, the Chronograph A is a nod to the popular styles from Bulova’s diver chronographs from the 1970s. This style was popularly known as the “Surfboard” for the distinctive oval “surfboard” encircling the two sub dials

- This updated version features a stainless steel case with accents colors on and around the dial
- The dial features the notable oval around the sub dials
- It features color-tipped hour and minute hands, luminous hands and markers, and chronograph second hand
- Five-hand chronograph quartz movement, domed sapphire crystal with anti-reflective coating
- Available in blue, black or orange perforated silicone strap with deployant closure
- Water resistance to 200 meters

SETTING THE TIME

This 2-subdial chronograph with built-in stopwatch can measure and display time up to 59 minutes/59 seconds and provide timing to 1/4 of a second.

- Unscrew the crown and then pull it out to the 2nd position, **C**.
- Turn the crown clockwise to set hour and minute hands.
- Push crown back in and then screw back into case to the Normal Crown Position, **A**, to ensure optimal 200M Water resistance.

READING THE ARCHIVE SERIES CHRONOGRAPH A

- 1** Minute Hand
- 2** Chronograph Start / Stop Pusher
- 3** Normal Crown Position
- 4** Chronograph Reset Pusher
- 5** Second Hand
- 6** Chronograph Second Hand
- 7** Chronograph Minute Hand
- 8** Hour Hand



BULOVA

ARCHIVE SERIES CHRONOGRAPH A “SURFBOARD” COLLECTION

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/4 second united up to maximum of 59 minutes 59 seconds.

Measuring time with the stopwatch

1. Press button “2” to start the chronograph.
2. The chronograph can be started and stopped each time button “A” is pressed.
3. Press button “4” to reset the chronograph and chronograph minute and second hands return to their zero positions.

CHRONOGRAPH RESET (INCLUDE AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the zero position.

1. Pull the crown out to the 2nd position, **C**.
2. Press the button “2” once to set the chronograph second hand to the zero position.
* The chronograph hand can be advanced rapidly by continuously pressing button “2”.
3. Once the hands are set at zero position, reset the time and return the crown to its Normal Crown Position, **A**.

