


H501 Movement Caliber Setting Instruction Addendum

The “Chronograph Zero Position” setting instruction as outlined on page 21 of the setting instructions is incorrect. Outlined below is the correct procedure.

[Chronograph Second Hand Zero Positioning]

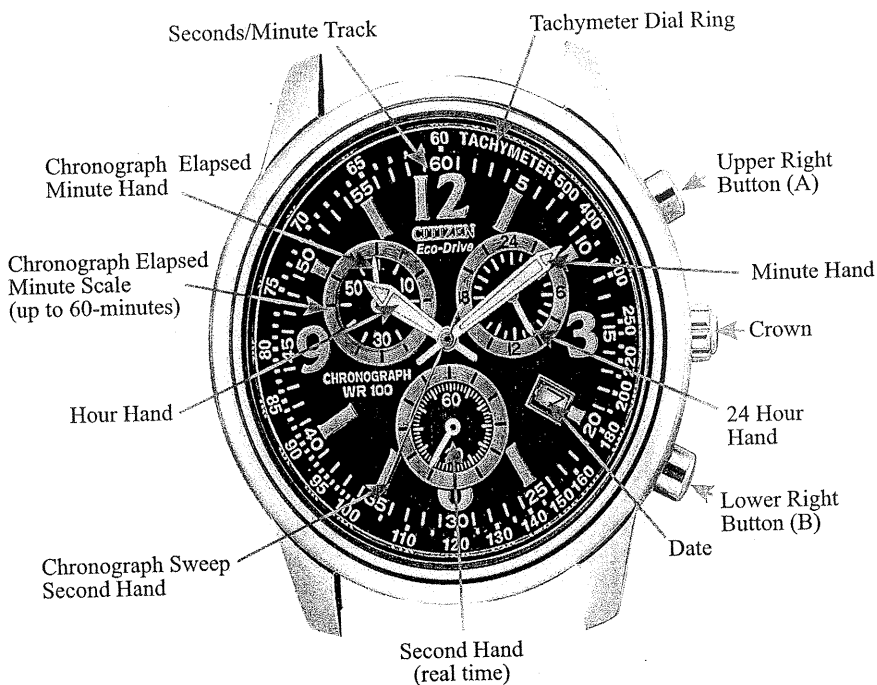

1. Pull the crown out to the time correction position.
2. Press button (A) for 3 seconds or more and release it, the watch enters the ‘chronograph second 0-position correction’ mode. *(this step was omitted from the original instructions)*
3. Press button (A) to position the chronograph second hand at the 0-seconds position.
 - The chronograph second hand can be advanced one second at a time (in the clockwise direction) each time button (A) is pressed.
 - The chronograph second hand can be advanced rapidly by pressing button (A) continuously.
4. Once the chronograph second hand has been positioned at the ‘0’ position, reset the time and return the crown to the normal position.
5. Press button (B) to check that the chronograph minute hand has been reset to the ‘0’ position.