

ABBREVIATED SETTING INSTRUCTIONS MODELS – AT703* PROXIMITY

Mvmt. Cal. No. W760


FEATURES

- Light Powered
- Perpetual Calendar
- Chronograph
- Power Reserve Indicator
- Non-Reflective Crystal
- Bluetooth® 4.0
- Citizen Proximity App
- Time/Date Sync
- iPhone® Search
- Call & Mail Alert
- Calendar Event Notification

BENEFITS

- Environmentally Clean Energy Source
- Accurate to the year 2100
- 1-Second Chronograph Measures up to 60 Minutes
- Measures Charge Level of Energy Cell
- Dial Clarity
- Low Energy powered by Eco-Drive
- Free convenient Technical Updates
- Updates across time zones via GSM phone signal
- Phone will ring within 10 Meter Range
- Notification delivered through combination of subtle watch vibration and second hand indicator
- Notification delivered through combination of subtle watch vibration and second hand indicator



 Please view our interactive setting instructions at www.citizenwatch.com

NOTE: After a complete loss of power or an abnormal function is noticed, an ALL RESET and 0-POSITIONING is required. Be sure to set the time and date after performing these procedures.

NOTE: This watch features a “power save” function. After 30 minutes of no exposure to light sufficient for charging, the watch enters “power save” mode. The second hand will stop. Although the second hand is not moving, the correct seconds are stored in memory. Power save mode is automatically canceled when the watch is either exposed to light sufficient for charging or a Bluetooth® 4.0 notification from a compatible iPhone® (5 or 4S) is received.

TO CHANGE OPERATION MODES

- Pull the crown out one ‘click.’
- Rotate the crown clockwise or counterclockwise to move the mode hand located at the 6:00 sub dial to the desired operation mode.
- Push the crown in one ‘click.’ This completes changing modes.

ALL RESET PROCEDURE AND 0-POSITIONING PROCEDURE

- Pull the crown out one ‘click.’
- Rotate the crown to move the mode hand (6:00 sub dial) to the “>0<” position.
- Pull the crown out one additional ‘click.’
- Press and hold both the lower right button (A) and upper right button (B) for 1-second then release. The watch will vibrate and the hands move slightly indicating a successful all reset. You must now set the 0-positions. The correct 0-positions are:

Hour, Minute and Second Hands: 12:00

24-Hour Hand (10:00 sub dial): 24

Multi-Function Hand (2:00 sub dial): 6:00

Date of Month: Between 31 and 1

- Press and release the upper right button (B). The hour and minute hands will move slightly.
- Rotate the crown to move the hour, minute and 24-hour hands to their respective zero positions.
- Press and release the upper right button (B). The second hand will move slightly indicating it is ready for setting. Rotate the crown to move the second hand to the 12:00 position.
- Press and release the upper right button (B). The multi-function hand (2:00 sub dial) and date will move slightly indicating they may now be set.
- Rotate the crown so that the multi-function hand (2:00 sub dial) is at 6:00, just after the date has reached the position between 31 and 1.

- Press the crown in two ‘clicks.’ This completes the All Reset and 0-Positioning. You must now set the time and perpetual calendar.

TO SET THE TIME

NOTE: If the watch is actively paired with a compatible iPhone® (5 or 4S) featuring Bluetooth® 4.0 technology, you may update the time automatically. There are times however that you will need to manually set the time.

- Pull the crown out one ‘click.’
- Rotate the crown to move the mode hand (6:00 sub dial) to the ‘TME’ (time) mode.
- Pull the crown out one additional ‘click.’
- Press and release either the lower right button (A) or upper right button (B). The second hand will rotate to the 12:00 position.
- Rotate the crown clockwise or counterclockwise to set the time. Be sure to pay attention to the 24-hour hand (10:00 sub dial) to ensure the proper AM or PM time is set.


NOTE: Spinning the crown quickly will engage the rapid advance feature. To cancel the rapid advance feature, turn the crown one ‘click’ in either direction.

- Push the crown in two ‘clicks.’


TO SET THE PERPETUAL CALENDAR

- Pull the crown out one ‘click.’
- Rotate the crown to move the mode hand (6:00 sub dial) to the ‘CAL’ mode.
- Pull the crown out one additional ‘click.’ The second hand will rotate to the current leap year position set in memory and the function hand (2:00 sub dial) will rotate to the current day of week set in memory.
- Rotate the crown to set the current month and leap year. Each hour indice will represent the month, while the hour indice and 3 minute indices immediately following will indicate the leap year.

Month of Year

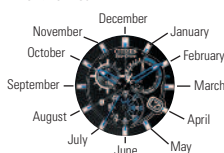

Leap Year Setting

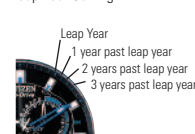

- Press and release the upper right button (B). The multi-function hand (2:00 sub dial) will move slightly indicating the date of month may be set.

- Rotate the crown clockwise or counterclockwise to adjust the date.
- NOTE:** The multi-function hand (2:00 sub dial) makes 5 rotations for each date change.
- Press and release the upper right button (B). The multi-function hand (2:00 sub dial) will rotate slightly indicating the current day of week may be set.
 - Rotate the crown clockwise or counterclockwise to set the current day of week.
 - Press the crown in two ‘clicks.’ This completes setting the calendar.

TO SET THE LOCAL (SECONDARY) TIME

- Pull the crown out one ‘click.’
- Rotate the crown to move the mode hand (6:00 sub dial) to the ‘L-TM’ (local or secondary time) mode.
- Pull the crown out one additional ‘click.’
- Rotate the crown clockwise or counterclockwise to set the time in 15-minute increments. Be sure to pay attention to the 24-hour hand (10:00 sub dial) to ensure the proper AM or PM time is set.
- Push the crown in two ‘clicks.’

TO USE THE CHRONOGRAPH

NOTE: While using the chronograph, if 60-minutes has elapsed, the chronograph will automatically stop and reset.

NOTE: While in chronograph mode, and the watch is actively paired with a compatible iPhone® (5 or 4S) featuring Bluetooth® 4.0 technology, visual notification of e-mail, schedule and calls is disabled. Notification is through vibration only.

- Pull the crown out one ‘click.’
- Rotate the crown to move the mode hand (6:00 sub dial) to the ‘CHR’ (chronograph) mode.
- Push the crown in one ‘click.’
- Press and release the upper right button (B) to start the chronograph.
- Press and release the upper right button (B) to stop the chronograph.
- Press and release the lower right button (A) to reset the chronograph.

For detailed full operating and compatible iPhone® (5 or 4S) pairing and use instructions, please refer to the W760 movement instruction guide found in the setting instruction section under support link of our website at www.citizenwatch.com